

NotifyLink with Palm OS Installation Guide

Supported Palms:

- Palm Centro
- Palm Treo 755
- Palm Treo 700p
- Palm Treo 680
- Palm Treo 650
- Palm Treo 600
- Palm Tungsten C
- Other Palm OS 5 based handhelds with a wireless data connection (802.11b)
- Any other wired only Palm OS Based device handheld running Palm OS 5 and above with at least 32 MB of RAM

Requirements:

- Palm OS 5.0 or later. You can check the OS version on your device by clicking on the time, selecting **Info** > **Version** from the device's main screen.

- Backup your device before beginning. If your device contains information such as Contacts, Calendar events, Tasks, or messages that you do not wish to lose, backup your device before you begin the installation process.

Over-The-Air Download

1. From a web browser on the device, browse to the *NotifyLink Over-The-Air Client Installation* page, <http://notifylink.notify.net/ota.asp>
2. Click on Palm OS Based Devices. When prompted, **save** the file, "ninstall.prc" to your **device**.
3. Once the download is complete, you will be prompted with the message: "Do you want to accept 'ninstall' into Applications?" Select Yes to accept this.
4. Open the NotifyLink Install application located on the Palm device's desktop.
5. Choose Scheduled Push and select Install. It may take a few minutes to install all of the files needed for NotifyLink to run.
6. When the download and installation has completed, you will be prompted to reset the device.

NOTE: NotifyLink may not function correctly if you do not reset your device after the installation.


Installation is complete – Register the device

Registering Your Device

Until a device is registered, the NotifyLink application will not synchronize Email and PIM. The registration process identifies you as a valid user on the NotifyLink Enterprise Server and allows you to begin using NotifyLink to synchronize the data between your device and your computer. Registering the device consists of:

- Entering your *Email Address* and an [Authentication Password](#).
- Performing an initial PIM synchronization (wireless sync).

Where to find your Authentication Password. You can check the authentication password for your account from the client web. From the NotifyLink Client Web, choose **General > Device**.

1. Select the NotifyLink  icon from the Palm Home screen.
2. Enter your Email Address and Authentication Password as they appear on the server.



***Palm Client Registration**

Email Address
email@dc03.notify.net

Authentication Password
password

Cancel Save Register

3. Select **Register**.
4. Once registration is complete, you will be prompted to check for registration messages. A welcome message is sent to the device *Inbox* and you are then prompted to perform the initial synchronization (OTA Load) for the device.
5. Select the PIM type(s) for which you are requesting an OTA Load.
 - Calendar
 - Contacts
 - Tasks
6. Select **Sync**.